

# Blue Earth County Fair

## General Pulling Rules for Tractor and Pickup Pull

### General Rules for All Classes

- No alcohol in the pit.
- No one under 16 years of age in the pit. ID's will be checked.
- Pull at your own risk.
- Promoter and its agents are not responsible for any breakage.
- (No pre entry) Enter at announcer's stand on day of pull.
- Pit gate & scale opens at 3:00 p.m.
- \*All drivers must attend Drivers Meeting before Pull.
- Be prepared to pull when your class is called.
- Puller will be disqualified, with the loss of any weights during pull.
- **Weight and hitch height will be checked at the end of each pull to qualify your pull.**
- Everyone pulls that comes. **Registration will close at 5:30 p.m.**
- Judges Decisions are **FINAL**.

### Pick-up Pulling Rules

- **(Must be licensed & Street Legal Only)** Must be stock appearing.
- Hitch pull point must be beyond the end of truck bed.
- Hitch shall not exceed 26" in height & clevis will need a 3" hole.
- Open Headers are allowed in all classes.
- Gas or diesel fuel only.

### Tractor Rules

- Stock block or factory replacement must bolt to clutch housing without modification.
- Only one fuel allowed, no pressurized LP booster, or nitrous oxide allowed.
- Any tire size is allowed.
- Duals allowed in 16,500 and 19,500 lb **Out of field classes**.
- Tractor must have hitch for skid hook min 3 inch diameter, or suitable clevis.
- Tractor hitch 18" from center of rear axle and 20" height.
- **(Out of field classes)** Rpm 10% over stock and stock appearing.
- **(Vintage class)** 1955 or older, Blue Earth County only.