

Blue Earth County Fair

General Pulling Rules for Tractor and Pickup Pull

General Rules for All Classes

- **(No pre entry)** Enter at the pit gate on day of pull.
- **3:30 p.m.** Pit gate opens & **4:30 p.m.** scale opens.
- **6.00 p.m.** Registration will close.
- **6:15 p.m.** Drivers Meeting *All drivers must attend.
- **6:30 p.m. Pull will start.** Pull at your own risk.
- Be prepared to pull when your class is called.
- **No alcohol in the pit.**
- **No one under 16 years of age in the pit.** ID's will be checked.
- Promoter and its agents are not responsible for any breakage.
- Puller will be disqualified, with the loss of any weights during pull.
- **Weight and hitch height will be checked at the end of each pull to qualify your pull.**
- Everyone pulls that comes. Judges Decisions are **FINAL**.

Tractor Rules

- Stock block or factory replacement must bolt to clutch housing without modification.
- Only one fuel allowed, no pressurized LP booster, or nitrous oxide allowed.
- Any tire size is allowed.
- Tractor must have hitch for skid hook min 3 inch diameter, or suitable clevis.
- Tractor hitch 18" from center of rear axle and 20" height.
- **(Vintage class)** 1956 and older.
- **(Hot Farm)** Any none stock gas or diesel farm tractor, Turbo chargers will be allowed in all hot farm classes.
- **(Stock Out of field classes)** Rpm 10% over stock and stock appearing. Duals allowed in 16,500 and 19,500 lb

Pick-up Pulling Rules

- **(Must be licensed & Street Legal Only)** Must be stock appearing.
- Hitch pull point must be beyond the end of truck bed.
- Hitch shall not exceed 26" in height & clevis will need a 3" hole.
- Open Headers are allowed in all classes.
- Gas or diesel fuel only.